

Adapters

(R)= RADIUS RIGHT ANGLE
(QD)= QUICK DISCONNECT

BNC FEMALE TO: (cont'd)	
MCX JACK (B)	ST9520
MCX PLUG	ST9467
MHV MALE	ST9297
MINI UHF MALE	ST9342
MMCX JACK	ST9516
MMCX PLUG	ST9519
N FEMALE	ST9206
N FEMALE (B)	ST9261
N FEMALE (B)	ST9540
N FEMALE (P)	ST9238
N FEMALE PRECISION	ST9492
N MALE	ST9002
N MALE (P)	ST9388
N MALE 90°	ST9278
N MALE PRECISION	ST9499
RCA PLUG	ST9158
REVERSE POLARITY BNC MALE	ST9529
SC FEMALE	ST9571
SC MALE	ST9200
SMA FEMALE	ST9075
SMA FEMALE (B)	ST9185
SMA FEMALE (B)	ST9407
SMA FEMALE PRECISION	ST9486
SMA MALE	ST9074
SMA MALE PRECISION	ST9495
SMB JACK	ST9136
SMB JACK (B)	ST9240
SMB PLUG	ST9137
SMB PLUG (B)	ST9241
SMC JACK	ST9140
SMC JACK (B)	ST9108
SMC PLUG	ST9141
SSMA MALE	ST9250
SSMB JACK	ST9394
SSMB PLUG	ST9395
TNC FEMALE	ST9097
TNC FEMALE (B) (H)	ST9483
TNC MALE	ST9088
TNC MALE 90°	ST9783
UHF FEMALE	ST9421
UHF MALE	ST9004
BNC MALE TO:	
75 OHM SMB JACK	ST9229
75 OHM SMB PLUG	ST9230
75 OHM SMC JACK	ST9233
75 OHM SMC PLUG	ST9234
7mm PRECISION	ST9221
10-32 FEMALE	ST9750
10-32 MALE	ST9751
BANANA PLUG DOUBLE	ST9009
BINDING POST SINGLE	ST9169
BINDING POSTS DOUBLE	ST9011
C FEMALE	ST9109
C MALE	ST9536
F FEMALE	ST9150
F MALE	ST9152
FME JACK	ST9711
FME PLUG	ST9697
FME PLUG 90°	ST9698
GR874	ST9223
HN FEMALE	ST9129
HN MALE	ST9567
MCX JACK	ST9468
MCX PLUG	ST9469
MHV FEMALE	ST9406
MINI UHF FEMALE	ST9341
MMCX JACK	ST9518
MMCX PLUG	ST9517
N FEMALE	ST9005
N FEMALE (P)	ST9123
N FEMALE 90°	ST9566
N FEMALE PRECISION	ST9490
N MALE	ST9127
N MALE 90°	ST9565
N MALE PRECISION	ST9489
RCA JACK	ST9171
REVERSE POLARITY BNC FEMALE	ST9538
SC MALE	ST9068
SMA FEMALE	ST9573
SMA FEMALE PRECISION	ST9494
SMA MALE	ST9072
SMA MALE PRECISION	ST9493
SMB JACK	ST9132
SMB PLUG	ST9135
SMC JACK	ST9138
SMC PLUG	ST9139
SSMA FEMALE	ST9191
SSMA MALE	ST9213
SSMB JACK	ST9392
SSMB PLUG	ST9393
TNC FEMALE	ST9098
TNC MALE	ST9110
UHF FEMALE	ST9107
UHF MALE	ST9207