





ASSEMBLY PROCEDURE: M

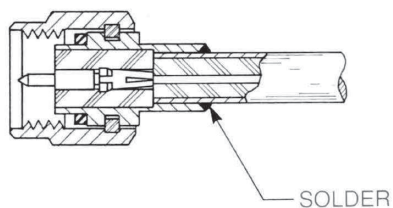

1) Trim cable per trim code.

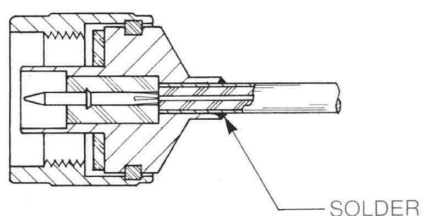

- 2) Insert cable into body until it bottoms, making sure center conductor of cable goes into contact.
- 3) Solder cable jacket to connector body. Do not disturb joint until it has cooled. Clean flux residue.